


# How-To-Measure-Your-Kitchen Guide

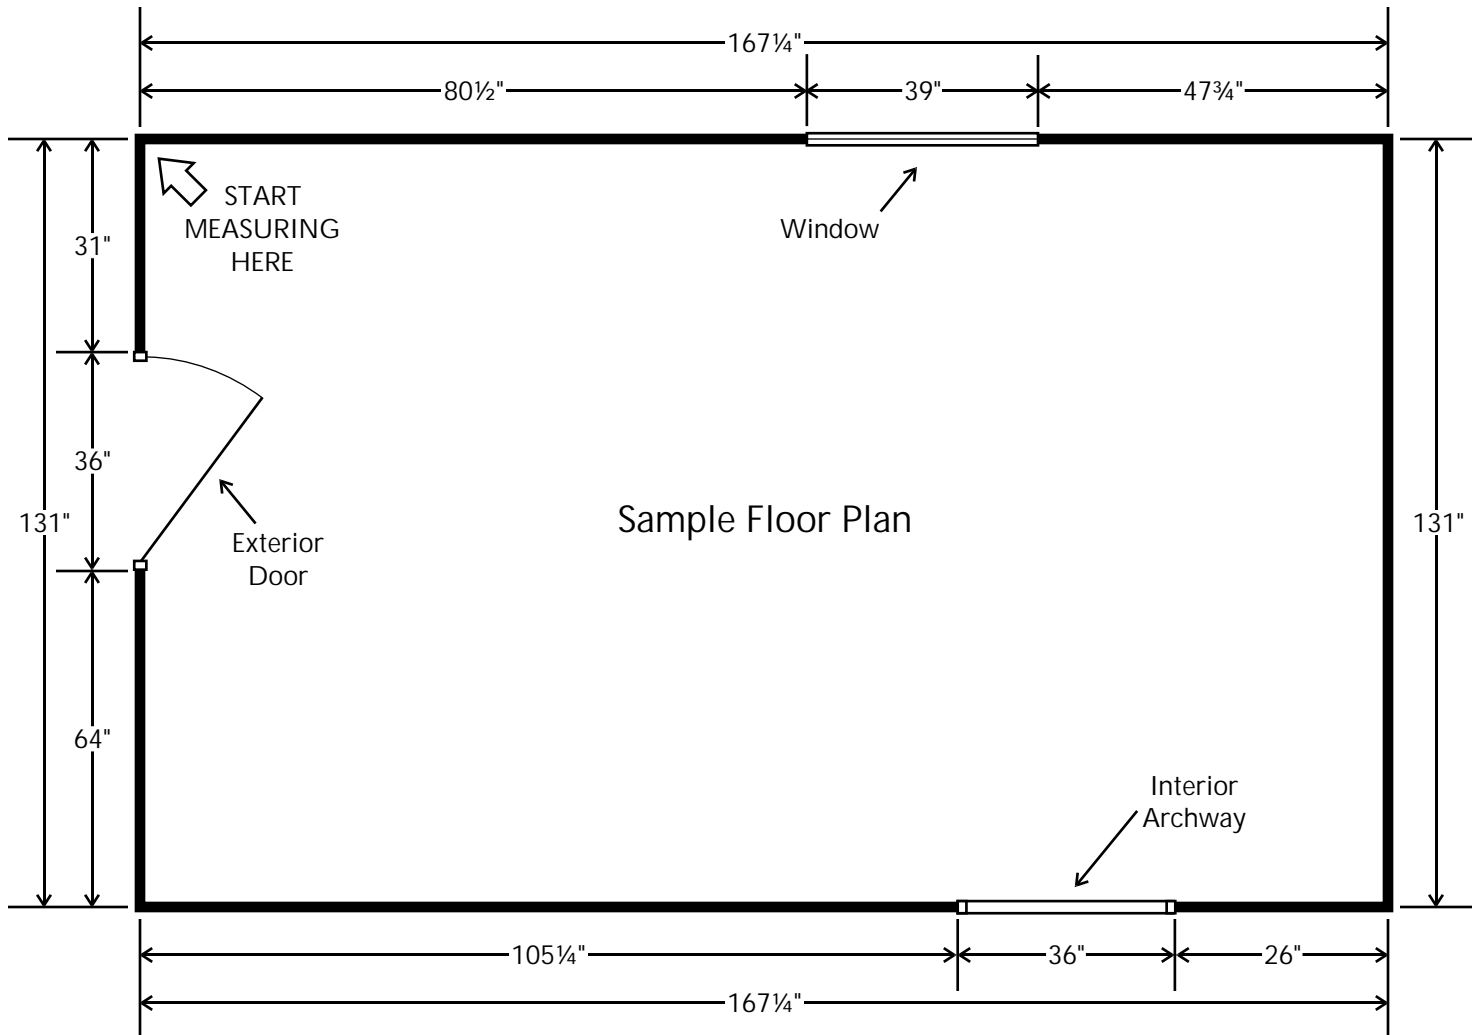

- Step 1** Start at one point in the room and measure the wall length from one corner to the nearest door or window casing (the outside of the trim). Then measure the overall width of the window or door opening (including the door and window casings). Continue the procedure proceeding around the entire room until you return to the starting point.
- Step 2** Measure the height of the ceiling. Note any interruptions (beams, ducts, etc.)
- Step 3** Complete the attached Cabinetry Wish List. Include any pictures, layouts or ideas that may aid our designer in completing your plan.
- Step 4** Mail or fax this information to:

KNIGHT  KITCHENS®

20 Innovation Drive  
No. Clarendon, Vermont 05759

Phone: (802) 773-8777  
Fax: (802) 773-6746  
Toll Free: (800) 473-9128

E-Mail: [info@KnightKitchens.com](mailto:info@KnightKitchens.com)  
Web Site: [www.KnightKitchens.com](http://www.KnightKitchens.com)